



## UHD44-EXB400R-K

**18Gbps 4 x 4 HDBaseT  
(150M) Matrix**

*Follow us on Youtube  
and Facebook*

**USER MANUAL**



[www.orei.com](http://www.orei.com)

# Table of Contents

Introduction	04
Features	04
Package Contents	05
Specifications	06
Operation Controls and Functions	08
IR Remote	11
IR Control System	12
IR Cable Pin Assignment	14
EDID Management	14
Web GUI User Guide	16
RS-232 Control Command	24
Application Example	34

## Thank you for purchasing this product

Thank you for purchasing this product. For optimum performance and safety, please read these instructions carefully before connecting, operating or adjusting this product. Please keep this manual for future reference.

## Surge protection device recommended

This product contains sensitive electrical components that may be damaged by electrical spikes, surges, electric shock, lightning strikes, etc. Use of surge protection systems is highly recommended in order to protect and extend the service life of your equipment.

# Registration Page

Please Activate your warranty by registering our product through the link below -  
<https://www.orei.com/pages/warranty-registration>

## **Technical Support**

### ***Need Help?***

Our experienced Technical Support Team is here for you to answer your questions, give technical advice or help troubleshoot your project to get you installed on time and on budget. Call, email or chat with us now.

### **OREI Live Technical Support Hours**

US team (US/Canada/Mexico): Monday-Friday, 9 a.m. - 6 p.m. Central Time **Support**

**Email** - [info@orei.com](mailto:info@orei.com) | **Support Number** - 877-290-5530

Or

### **Chat Live on [www.orei.com](http://www.orei.com)**

Send us an instant message now. Our Technical Support Team will respond momentarily. Available during live support hours.

# Introduction

The UHD44-EXB400R-K can connect up to 4 HDMI sources and output to 8 displays. It features four HDMI outputs, and each HDMI output is mirrored to provide a CAT-Cable output which runs simultaneously. It supports transmission of video with resolutions up to 4K@60Hz 4:4:4. Audio de-embedded to analog and coaxial audio is supported. Each HDMI output supports 4K to 1080P downscale function independently. HDBaseT output can extend video transmission distance up to 492ft/150m via a single Cat 5e/6/7 cable. The product supports Bi-Directional IR control. The product provides an intuitive set of front panel with OLED screen and supports control via the front panel buttons, IR remote, RS-232, LAN, and Web GUI.



## Features

1. HDMI 2.0b, HDCP 2.2 and HDCP 1.x compliant
2. Video resolution up to 4K@60Hz (YUV 4:4:4) on all HDMI & HDBaseT ports
3. 4 HDMI inputs, 4 HDMI & HDBaseT mirrored outputs
4. HDMI ports transmit 18Gbps lossless uncompressed video bandwidth
5. Supports 18Gbps lossless compressed HDBaseT signal transmission
6. Supports 4K->1080P Down Scale function on each HDMI output port

7. HDR, HDR 10, HDR 10+, Dolby Vision, HLG are supported
8. HDBaseT output can extend video transmission distance up to 492ft / 150m for 1080P or 394ft / 120m for 4K via a single Cat 5e/6/7 cable
9. HDMI audio pass-through up to 7.1CH HD audio (LPCM, Dolby TrueHD and DTS-HD Master Audio)
10. Supports Bi-Directional IR control
11. Audio de-embedded output is supported via analog and coax ports
12. Advanced EDID management and CEC control are supported
13. 24V POC on all HDBaseT ports
14. 1U rack mounted design with front panel OLED display
15. Control via front panel buttons, IR remote, RS-232, LAN and Web GUI

## Package Contents

1.	UHD44-EXB400R-K	1 pcs
2.	IR Remote	1 pcs
3.	HDBaseT Receiver	4 pcs
4.	100~240V AC 50/60Hz Power Cable	1 pcs
5.	RS-232 Serial Cable (1.5m, male to female head)	1 pcs
6.	3-pin Phoenix Connector	4 pcs
7.	5-pin Phoenix Connector	4 pcs
8.	IR Blaster Cable (1.5m)	5 pcs
9.	IR Receiver Cable (1.5m)	5 pcs
10.	Mounting Ear (Matrix and Receiver)	10 pcs
11.	User Manual	1 pcs

# Specifications


Technical	
HDMI Compliance	HDMI 2.0b
HDCP Compliance	HDCP 2.2/1.x
Video Bandwidth	18Gbps
Video Resolution	Up to 4K@60Hz 4:4:4
Color Depth	8-bit, 10-bit, 12-bit (1080p@60Hz) 8-bit (4K@60Hz YUV4:4:4) 8-bit, 10-bit, 12-bit (4K@60Hz YCbCr 4:2:2/4:2:0)
Color Space	RGB 4:4:4, YCbCr 4:4:4/4:2:2/4:2:0
HDR	HDR 10, HDR 10+, Dolby Vision, HLG
HDMI Audio Formats	LPCM 2.0/2.1/5.1/6.1/7.1, Dolby Digital, Dolby TrueHD, Dolby Digital Plus(DD+), DTS-ES, DTS HD Master, DTS HD-HRA, DTS-X
Coax Audio Formats	PCM 2.0, Dolby Digital / Plus, DTS 2.0/5.1
Analog Balanced Audio Formats	PCM 2.0CH
Vmax	2Vrms
SNR	> 90dB
THD+N Ratio	< 0.1% (V_max) 0.001%-0.01% (V_best)
Crosstalk	> 80dB
Frequency Response	20Hz~20kHz ±0.5dB
ESD Protection	Human body model – ±8kV (Air-gap discharge) & ±4kV (Contact discharge)
Connection	
Matrix	Inputs: 4 × HDMI INPUT [Type A, 19-pin female] Outputs: 4 × HDMI OUTPUT [Type A, 19-pin female] 4 × HDBaseT OUTPUT ports [RJ45] 4 × Coaxial audio [3.5mm Stereo Mini-jack] 4 × balanced analog audio [5-pin Phoenix connector] Control: 5 × IR IN [3.5mm Stereo Mini-jack] 5 × IR OUT [3.5mm Stereo Mini-jack] 1 × TCP/IP [RJ45] 1 × RS-232 [D-Sub 9]

# Specifications

<b>Connection</b>			
HDBaseT Receiver	Inputs: 1 × HDBT IN [RJ45, 8-pin female] Outputs: 1 × HDMI Type A [19-pin female] 1 × AUDIO OUT [3.5mm Stereo Mini-jack] Controls: 1 × IR IN [3.5mm Stereo Mini-jack] 1 × IR OUT [3.5mm Stereo Mini-jack] 1 × RS-232 [3-pin Phoenix connector] 1 × SERVICE [Mini-USB, Update port]		
<b>Mechanical</b>			
Housing	Metal Enclosure		
Silkscreen Color	Black		
Dimensions	Matrix: 440mm (W) × 200mm (D) × 44.5mm (H) Receiver: 140mm (W) × 65mm (W) × 18mm (W)		
Weight	Matrix: 3.1kg, Receiver: 155g		
Power Supply	AC 100 - 240V 50/60Hz		
Power Consumption	60W (Max)		
Operating Temperature	32-104°F / 0-40°C		
Storage Temperature	-4-140°F / -20-60°C		
Relative Humidity	20-90% RH (Non-condensing)		
<b>Resolution / Distance</b>	<b>4K60 - Feet / Meters</b>		
CAT 5e/6/7	492ft / 150m		
<b>Resolution / Cable length</b>	<b>4K60 - Feet / Meters</b>	<b>4K30 - Feet / Meters</b>	<b>1080P60 - Feet / Meters</b>
HDMI IN / OUT	16ft / 5m	32ft / 10m	50ft / 15m
The use of "Premium High Speed HDMI" cable is highly recommended.			

# Operation Controls and Functions


## Front Panel

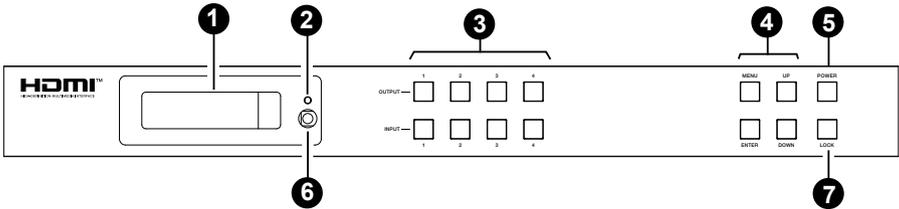

No.	Name	Function Description
1.	OLED screen	Display matrix switching status, input / output port, EDID, Baud rate, IP Address.
2.	Power LED	The Power LED will light up green when the product is working normally, and red when the product is on standby.
3.	OUTPUT / INPUT buttons	You need to press an output button (1~4) first and then press an input button (1~4) to select the corresponding input source for the output port.
4.	MENU / ENTER / UP / DOWN	<p>① <b>EDID setting:</b> On the initial OLED display screen, press "MENU" button to enter "Select EDID" interface, press "UP/DOWN" button to select the required EDID, and press the "ENTER" button to enter "Copy to Input:" interface. Then press "UP/DOWN" button to select the input port you need to set, and press "ENTER" button again to confirm.</p> <p>② <b>Baud rate setting:</b> On the initial OLED display screen, press "MENU" button twice to enter "SELECT BAUD" interface, and press "UP/DOWN" button to select the required Baud rate, finally press the "ENTER" button to confirm the setting.</p> <p>③ <b>IP Address Check:</b> On the initial OLED display screen, press "MENU" button three times to enter the IP interface and check the current IP address, then press "UP/DOWN" button to switch DHCP ON/OFF, finally press the "ENTER" button to confirm the setting. Pressing the "MENU" button again will return to the initial OLED display status.</p>
5.	POWER button	Press and hold the POWER button for 3 seconds to enter the standby mode, and then press the button again to wake up the device.
6.	IR window	IR receiver window. It only receives the IR remote signal from this product.
7.	LOCK button	Press the LOCK button to lock front the panel buttons (Except the power button); press the button again to unlock.

# Operation Controls and Functions


## Rear Panel

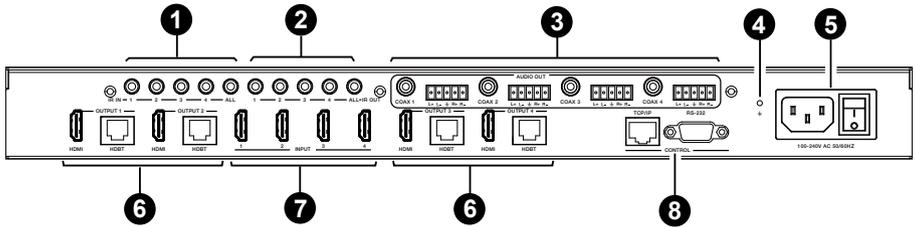

No.	Name	Function Description
1	IR IN (1/2/3/4/ ALL) ports	Connect to IR receiver cable, and the IR signal will be emitted to the "IR OUT" port on the HDBaseT Receiver.
2.	IR OUT (1/2/3/4/ ALL) ports	Connect to IR blaster cable, and the IR signal is received from the "IR IN" port on the HDBaseT Receiver.
3.	AUDIO OUT (1-4) ports	4 groups of coaxial and balanced analog audio mirrored output ports. AUDIO OUT (1-4) follows the video output of OUTPUT (1-4) ports.
4.	GND	Connect the housing to the ground.
5.	POWER input	Power port: Connect to 100-240V AC 50/60Hz power cable. Power switch: Press the switch to turn the device on/off.
6.	OUTPUT (1-4) ports	HDMI output ports, connect to HDMI display device such as TV or monitor with an HDMI cable. HDBT mirrored output ports, connected to HDBaseT Receiver via a CAT cable.
7.	INPUT (1-4) ports	HDMI input ports, connected to HDMI source device such as DVD or PS4 with an HDMI cable.
8.	CONTROL ports	TCP/IP: The link port for TCP/IP control, connected to an active Ethernet link with an RJ45 cable. RS-232: Command control port, connect to a PC or control system with a D-Sub 9-pin cable to control the matrix.

# Operation Controls and Functions


## HDBaset Receiver Panel

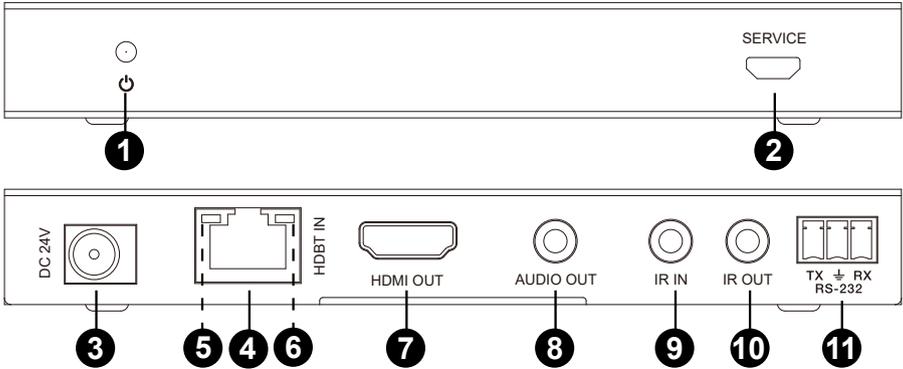

No.	Name	Function Description
1.	Power LED	Red LED will be on when the receiver is powered on.
2.	SERVICE port	Firmware update port.
3.	DC 24V	DC 24V/1A power supply input port. <b>Note:</b> The Matrix supports PoC function, it means that either transmitter or receiver is powered on by the 24V/1A power adapter, the other one doesn't need power supply.
4.	HDBT IN	RJ45 connector for connecting to the HDBT OUTPUT port of the Matrix with a CAT cable.
5.	Connection Signal Indicator	<ul style="list-style-type: none"> <li>▪ Illuminating: Matrix and Receiver are in good connection status.</li> <li>▪ Flashing: Matrix and Receiver are in poor connection status.</li> <li>▪ Dark: Matrix and Receiver are not connected.</li> </ul>
6.	Data Signal Indicator	<ul style="list-style-type: none"> <li>▪ Illuminating: HDMI signal with HDCP.</li> <li>▪ Flashing: HDMI signal without HDCP.</li> <li>▪ Dark: No HDMI signal.</li> </ul>
7.	HDMI OUT	HDMI output port, connect to HDMI display device such as TV or monitor with HDMI cable.

No.	Name	Function Description
8.	AUDIO OUT	Analog audio output port. The audio is extracted from HDMI signal.
9.	IR IN	Connect the IR receiver cable, and the IR signal will be sent to the "IR OUT" port of the Matrix.
10.	IR OUT	Connect the IR blaster cable, and the IR signal is received from the "IR IN" port of the Matrix.
11.	RS-232	Connect to a PC or control system with a 3-pin phoenix connector cable to transmit command between the Matrix and HDBaseT Receiver.

## IR Remote

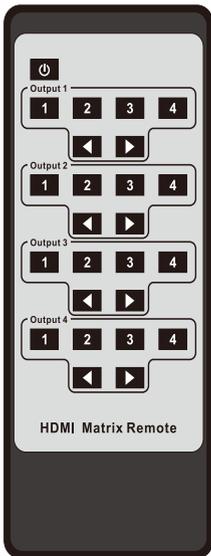

- ⏻: Press this button to power on the product or set it to standby mode.
- Output 1:** Press 1\2\3\4 button to select input source to HDMI OUTPUT 1.
- Output 2:** Press 1\2\3\4 button to select input source to HDMI OUTPUT 2.
- Output 3:** Press 1\2\3\4 button to select input source to HDMI OUTPUT 3.
- Output 4:** Press 1\2\3\4 button to select input source to HDMI OUTPUT 4.
- ◀ ▶: Press these buttons to circularly select the last or next input source in single screen display mode.

# IR Control System

The product is not only a matrix switch but also an extender. It supports bi-directional IR control. When the Matrix is connected to HDBaseT Receiver through Cat 5e/6/7 cable, you can control remote display device (HDBaseT) or input source device (Matrix) through IR signal transmission. But you must note that the IR signal transmission method is different for Matrix (local) to HDBaseT Receiver (remote) control and from HDBaseT Receiver (remote) to Matrix (local) control.

**At the Matrix end (Local end):** The IR signal is one-to-one transmission. For example, the IR IN 1 port signal of the Matrix will be emitted to IR OUT port of the HDBaseT Receiver 1, and the IR IN 3 port signal of the Matrix will be emitted to IR OUT port of the HDBaseT Receiver 3. It doesn't follow the video switch to change. IR IN ALL port signal of the Matrix will be emitted to all IR OUT ports of HDBaseT receivers simultaneously. Please see the following connection diagram.

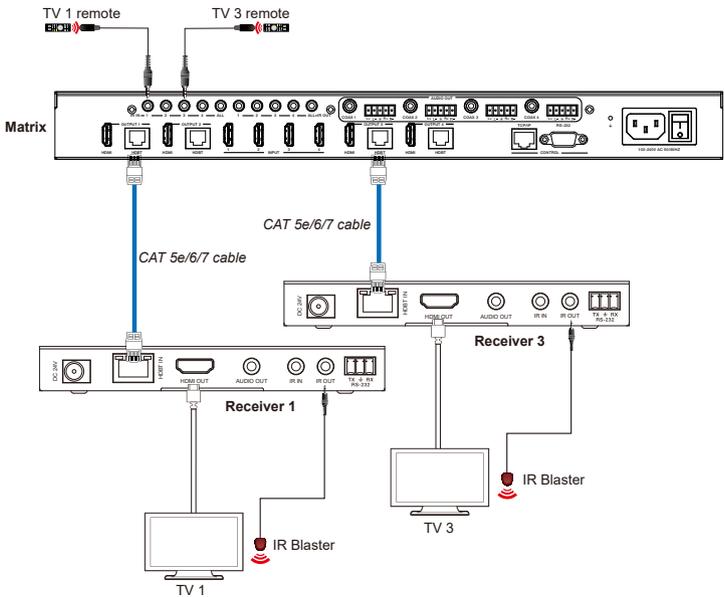
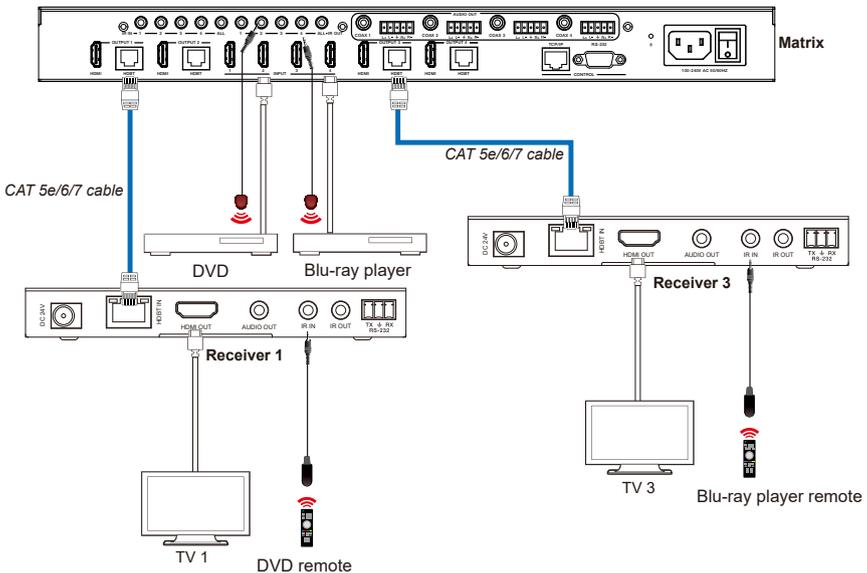


Figure 1: IR connection diagram (Matrix end)


**At HDBaseT receiver (Remote end):** IR signal follows video switch to change. For example, the HDMI output signal on the HDBaseT Receiver 1 is from the HDMI INPUT 2 port, so IR input signal of the HDBaseT Receiver 1 will be emitted to IR OUT 2 port of the Matrix. The HDMI output signal on the HDBaseT Receiver 3 is from the HDMI INPUT 4 port. Then, IR input signal of the HDBaseT Receiver 3 will be emitted to IR OUT 4 port of the Matrix. Any of HDBaseT Receiver's IR IN signal can output from IR OUT ALL port of the Matrix and the IR OUT ALL signal of the Matrix depends on your IR remote of source device. Please see the following connection diagram.



**Figure 2: IR connection diagram (HDBaseT Receiver end)**

# IR Cable Pin Assignment

## IR Cable Pin Assignment

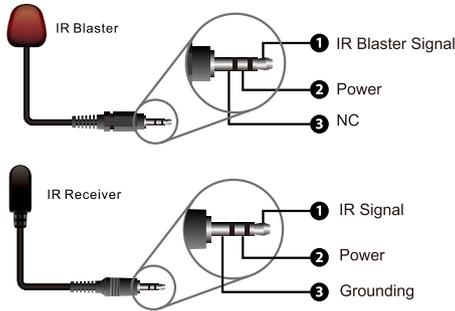

## EDID Management


This Matrix has 21 factory defined EDID settings, 2 user-defined EDID modes and 8 copy EDID modes. You can select defined EDID mode or copy EDID mode to input port through on-panel button, RS-232 control or Web GUI.

**On-panel button operation:** On the initial OLED display screen, press "MENU" button to enter the EDID setting interface, press "UP/DOWN" button to select the required EDID, and press the "ENTER" button to enter "Copy to Input:" interface. Then press "UP/DOWN" button to select the input port you need to set, and press "ENTER" button again to confirm this operation.

# EDID Management

**RS-232 control operation:** Connect the Matrix to PC with a serial cable, then open a Serial Command tool on PC to send ASCII command “s edid in x from z!” to set EDID. For details, please refer to “EDID Setting” in the ASCII command list of “RS-232 Control Command”.

**Web GUI Operation:** Please check the EDID management in the “Input page” of “Web GUI User Guide”.

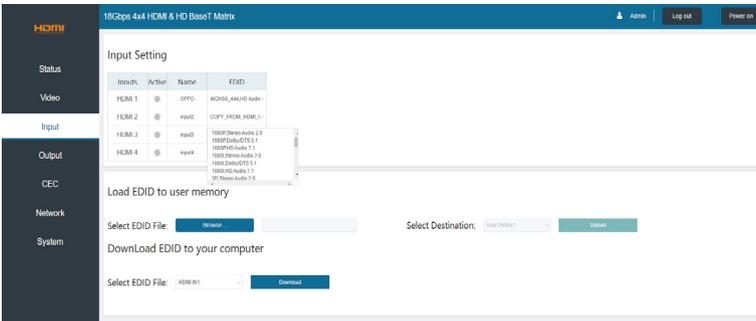

The defined EDID setting list of the product is shown as below:

No.	EDID Mode	No.	EDID Mode
1.	1080p, Stereo Audio 2.0	14.	4K2K60_420, Dolby/DTS 5.1
2.	1080p, Dolby/DTS 5.1	15.	4K2K60_420, HD Audio 7.1
3.	1080p, HD Audio 7.1	16.	4K2K60_444, Stereo Audio 2.0
4.	1080i, Stereo Audio 2.0	17.	4K2K60_444, Dolby/DTS 5.1
5.	1080i, Dolby/DTS 5.1	18.	4K2K60_444, HD Audio 7.1
6.	1080i, HD Audio 7.1	19.	4K2K60, Stereo Audio 2.0 HDR
7.	3D, Stereo Audio 2.0	20.	4K2K60, Dolby/DTS 5.1 HDR
8.	3D, Dolby/DTS 5.1	21.	4K2K60, HD Audio 7.1HDR
9.	3D, HD Audio 7.1	22.	User define1
10.	4K2K30_444, Stereo Audio 2.0	23.	User define2
11.	4K2K30_444, Dolby/DTS 5.1	24.	Copy from HDMI OUTPUT 1~4
12.	4K2K30_444, HD Audio 7.1	25.	Copy from HDBT OUTPUT 1~4
13.	4K2K60_420, Stereo Audio 2.0		

# Web GUI User Guide

The Matrix can be controlled by Web GUI. The operation method is shown as below:

**Step 1:** Get the current IP Address.

The default IP address is 192.168.1.100. You can get the current Matrix IP address in two ways:

**The first way:** You can get the IP address via panel buttons. On the initial OLED display, press "MENU" button three times to enter the IP interface and check the current IP address.


**The second way:** You can get the IP address via RS-232 control. Send the ASCII command " r ipconfig!" through a Serial Command tool, then you'll get the feedback information as shown below:

```
IP Mode: DHCP
IP:192.168.62.109
Subnet Mask:255.255.255.0
Gateway:192.168.62.1
TCP/IP port:8000
Telnet port:23
Mac address:6c-df-fb-0c-b3-8e
```

IP:192.168.62.109 in the above figure is the current Matrix IP address (this IP address is variable, depending on what the specific machine returns).

For the details of RS-232 control, please refer to "**RS-232 Control Command**".

**Step 2.** Connect the TCP/IP port of the Matrix to a PC with an UTP cable (as shown in the following figure), and set the IP address of the PC to be in the same network segment with the Matrix.

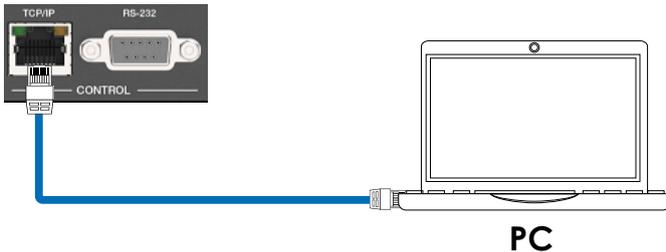

**Step 3.** Enter the current IP address of Matrix into your browser on the PC to enter the Web GUI page. There will be a Login page as below:



Select the Username from the list and enter the password. The default passwords are:

Username **User Admin**

Password **user admin**

After entering the password, click the "LOGIN" button and the following Status page will appear.


## ■ Status Page

The Status page provides basic information about the product model, installed firmware version and the network settings of the device.

19Gbps 4x4 HDMI & HD BaseT Matrix	
Model	HDP-MXB44H150
Firmware Version	V1.00.10/V1.005
Sub1 Version	V1.00.07
Sub2 Version	V1.00.02
Cyid1 Version	V1.00.04
Hostname	IP-module-7CB64
IP Address	192.168.1.105
Subnet Mask	255.255.255.0
Gateway	192.168.1.1
MAC Address	6C:DF:FB:07:CB:64

# Web GUI User Guide


## ■ Video Page

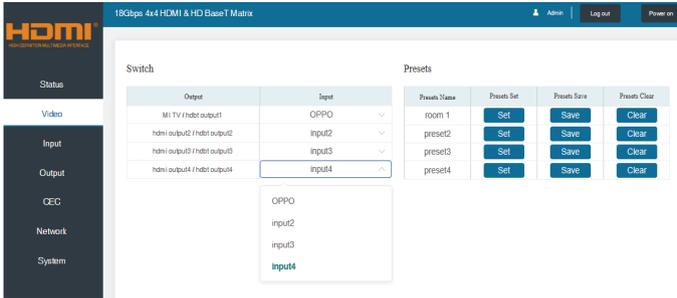

You can do the following operations on the Video page:

- ① **Output:** The current device's OUTPUT port. You can select a signal source for it.
- ② **Input:** You can click the drop-down menu to select a signal source for the corresponding OUTPUT port .
- ③ **Presets Name:** You can name the current scene with maximum length of 12 characters (Chinese name is unsupported).
- ④ **Presets Save:** You can save audio-video matrix switching relationship.
- ⑤ **Presets Clear:** You can clear the saved audio-video matrix switching relationship.

## ■ Input Page

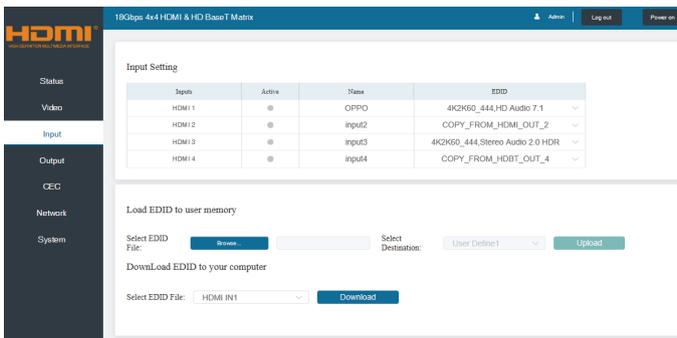

You can do the following operations on the Input page:


- ① **Inputs:** Input channel of the device.
- ② **Active:** It indicates whether the channel is connected to a signal source.
- ③ **Name:** The input channel's name. You can modify it by entering the corresponding name (max length: 12 characters) in the input box (Chinese name is unsupported).
- ④ **EDID:** You can set the current channel's EDID. The specific operation is as follows:

## Set EDID for the User

Click the "Browse" button, then select the bin file. If you select the wrong EDID file, there will be a prompt, as shown in the following figure:



Make sure to select the correct file, then you can check the name of the selected file. Select "User 1" or "User 2", then click "Upload". After successful setting, it will prompt as follows:

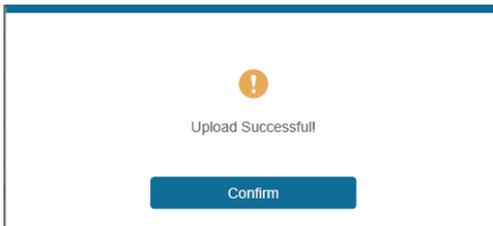


## Download the EDID File for the Corresponding Input Channel

Click the drop-down box of "Select EDID File" to select the corresponding input channel. Then click "Download" to download the corresponding EDID file.

# Web GUI User Guide


## ■ Output Page

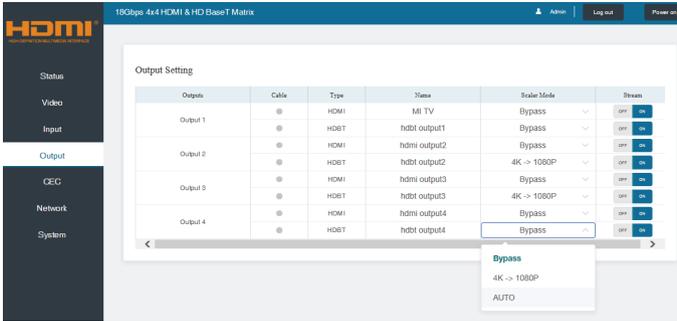

You can do the following operations on the Output page:

- ① **Outputs:** Output channel of the device.
- ② **Name:** The current output channel's name. You can modify it by entering the corresponding name (max length: 12 characters) in the input box (Chinese name is unsupported).
- ③ **Type:** The current output channel's type (HDMI or HDBT).
- ④ **Cable:** It indicates the connection status of output ports. When the output port is connected to the display, it shows green, otherwise, it shows gray.
- ⑤ **Scaler Mode:** Set the current output resolution mode.
- ⑥ **Stream:** Turn the output stream on/off.

## ■ CEC Page

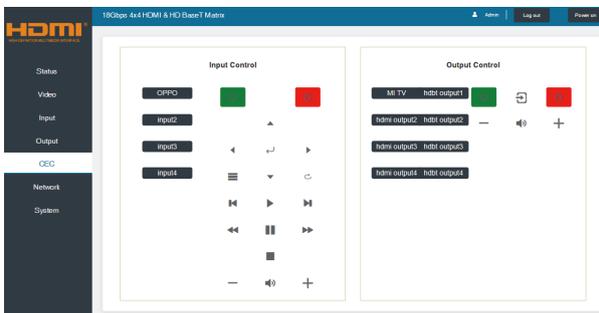

You can perform CEC management on this page:

- ① **Input Control:** You can control the operation of each input source by pressing the icons on the page. (You can control multiple inputs simultaneously.)
- ② **Output Control:** You can control the operation of each display, such as power on/off, volume +/-, active source switching. (You can control multiple outputs simultaneously.)

## ■ Network Page

19Gbps 4x4 HDMI & HD BaseT Matrix

Admin Log out Power on

**HDMI**  
HDMI 1.4a & HDCP 1.4

Status  
Video  
Input  
Output  
CEC  
Network  
System

### IP Settings

Mode:  Static  DHCP

IP Address:  Gateway:

Subnet Mask:  Default Port:

### Web Login Settings

Username:  User  Admin

Old Password:


New Password:

Confirm Password:

Product Model:


## Set the Default Network

Click "Set Network Defaults" button, there will be a prompt, as shown in the following figure:

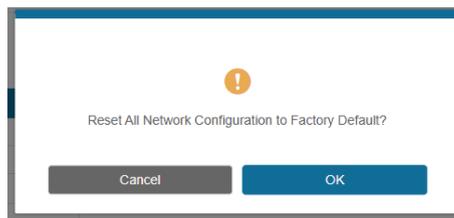

# Web GUI User Guide


Click "OK" to search the IP Address again, as shown in the following figure:

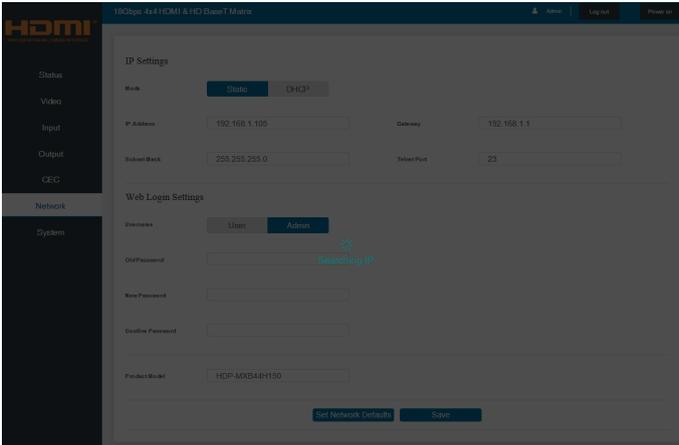

After searching is completed, it will switch to the login page, the default network setting is completed.

## Modify User Password

Click the "User" button, enter the correct Old Password, New Password, and Confirm Password, and then click "Save". After successful modification, there will be a prompt, as shown in the following figure:

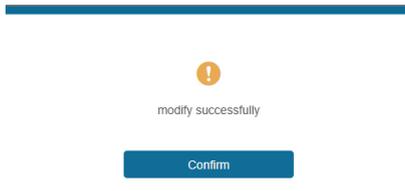

**Note:** Input rules for changing passwords:

- (1) The password can't be empty.
- (2) New Password can't be the same as Old Password.
- (3) New Password and Confirm Password must be the same.

## Modify Network Setting

Modify the Mode/IP Address/Gateway/Subnet Mask/Telnet Port as required, and click “Save” to save the settings. Then it will come into effect. After modification, if the Mode is “Static”, it will switch to the corresponding IP Address; if the Mode is “DHCP”, it will automatically search and switch to the IP Address assigned by the router.

IP Settings	
Mode	<input checked="" type="radio"/> Static <input type="radio"/> DHCP
IP Address	<input type="text" value="192.168.1.105"/>
Subnet Mask	<input type="text" value="255.255.255.0"/>
Gateway	<input type="text" value="192.168.1.1"/>
Telnet Port	<input type="text" value="23"/>

## ■ System Page


You can do the following operations on the System page:

- ① **Panel Lock:** Click to lock/unlock panel buttons. “On” indicates that panel buttons are unavailable; “Off” indicates panel buttons are available.
- ② **Beep:** Click to turn on/off the beep.
- ③ **LCD:** You can turn on/off the LCD, and set the turn-on time (15s/30s/60s).
- ④ **Serial Baud Rate:** Click the value to set the Serial Baud Rate.
- ⑤ **Firmware Update:** Click “Browse” to select the update file, then click “Update” to complete firmware update.
- ⑥ **Factory Reset:** You can reset the device to factory defaults by clicking “Reset”.
- ⑦ **Reboot:** You can reboot the device by clicking “Reboot”.

**Note:** After reset/reboot, it will switch to the login page.

# RS-232 Control Command

The product also supports RS-232 control. You need a serial cable with RS-232 male head and DB9 transfer USB male head. The RS-232 head of the serial cable is connected to the RS-232 control port with DB 9 at the rear of the Matrix, and the USB head of the serial cable is connected to a PC. The connection method is as follows:

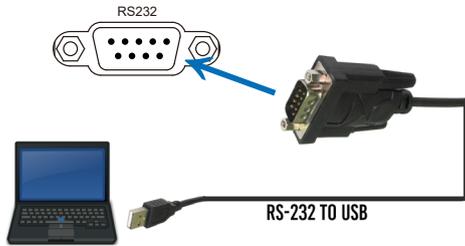

Then, open a Serial Command tool on PC to send ASCII commands to control the Matrix. The ASCII command list of the product is as below.

ASCII Commands				
Serial port protocol: baud rate: 115200, Data bits: 8, Stop bits: 1, Check bit: 0				
x - Parameter 1; y - Parameter 2; ! - Delimiter				
Command Code	Function Description	Example	Feedback	Default
<b>Power</b>				
s power z!	Power on/off the device, z=0-1 (z=0 power off, z=1 power on)	s power 1!	Power on System Initializing... Initialization Finished! FW version x.xx.xx	power on
r power!	Get current power state	r power!	power on/power off	
s reboot!	Reboot the device	s reboot!	Reboot... System Initializing... Initialization Finished! FW version x.xx.xx	

Command Code	Function Description	Example	Feedback	Default
<b>System Setting</b>				
help!	List all commands	help!		
r type!	Get device model	r type!	HDP-MXB44H150	
r status!	Get device current status	r status!	Get the unit all status: power, beep, lock, in/out connection, video/ audio crosspoint, edid, scaler,hdcp, network status	
r fw version!	Get Firmware version	r fw version!	MCU BOOT:Vx.xx.xx MCU APP :Vx.xx.xx SUB1 APP :Vx.xx.xx SUB2 APP :Vx.xx.xx CPLD APP :Vx.xx.xx WEB GUI :Vx.xx	
r link in x!	Get the connection status of the x input port, x=0-4(0=all)	r link in 1!	hdmi input 1: connect	
r link out y!	Get the connection status of the y output port, y=0-4(0=all)	r link out 1!	hdmi output 1: connect hdbt output 1: connect	
s reset!	Reset to factory defaults	s reset!	Reset to factory defaults System Initializing... Initialization Finished! FW version x.xx.xx	
s beep z!	Enable/Disable buzzer function, z=0-1 (z=0 beep off, z=1 beep on)	s beep 1!	beep on beep off	beep on
r beep!	Get buzzer state	r beep!	beep on/beep off	
s lock z!	Lock/Unlock front panel button, z=0-1 (z=0 lock off,z=1 lock on)	s lock 1!	panel button lock on panel button lock off	panel button lock off
r lock!	Get panel button lock state	r lock!	panel button lock on/off	

# RS-232

## Control Command

Command Code	Function Description	Example	Feedback	Default
s lcd on time z!	Set LCD screen remain on time, z=0~4 (0:off, 1:always on, 2:15s, 3:30s, 4:60s)	s lcd on time 1!	lcd always on	lcd on 30 seconds
r lcd mode!	Get the backlight status of lcd screen	r lcd mode!	lcd always on	
s save preset z!	Save switch state between all output port and the input port to preset z, z=1~4	s save preset 1!	save to preset 1	
s recall preset z!	Call saved preset z scenarios, z=1~4	s recall preset 1!	recall from preset 1	
s clear preset z!	Clear stored preset z scenarios, z=1~4	s clear preset 1!	clear preset 1	
r preset z!	Get preset z information, z=1~4	r preset 1!	video/audio crosspoint	
s logo1 *****!	Set the logo name displayed on the first line of LCD screen, the max character is 16	s logo1 Matrix Swtich!	logo1:Matrix Swtich	
s baud rate xxx!	Set the serial port baud rate of RS02 module, z=(115200,57600,38400,19200,9600,4800)	s baud rate 115200!	Baudrate:115200	115200
r baud rate!	Get the serial port baud rate of RS02 module	r baud rate!	Baudrate:115200	
s id z!	Set the control ID of the product, z=000-999	s id 888!	id 888	0
<b>Output Setting</b>				
s in x av out y	Set input x to output y, x=1~4, y=0~4(0=all)	s in 1 av out 2!	input 1 -> output 2	ptp
r av out y!	Get output y signal status y=0~4(0=all)	r av out 0!	input 1 -> output 1 input 2 -> output 2 input 3 -> output 3 input 4 -> output 4	

Command Code	Function Description	Example	Feedback	Default
s hdmi y stream z!	Set hdmi output y stream on/off, y=0~4(0=all) z=0-1 (0:disable,1:enable)	s hdmi 1 stream 1! s hdmi 0 stream 1!	enable hdmi output 1 stream disable hdmi output 1 stream enable hdmi all outputs stream disable hdmi all outputs stream	enable
r hdmi y stream!	Get hdmi output y stream status, y=0~4(0=all)	r hdmi 1 stream!	enable hdmi output 1 stream	
s hdbt y stream z!	Set hdbt output y stream on/off, y=0~4(0=all) z=0-1 (0:disable,1:enable)	s hdbt 1 stream 1! s hdbt 0 stream 1!	enable hdbt output 1 stream disable hdbt output 1 stream enable hdbt all outputs stream disable hdbt all outputs stream	enable
r hdbt y stream!	Get hdbt output y stream status, y=0~4(0=all)	r hdbt 1 stream!	enable hdbt output 1 stream	
s hdmi y scaler z!	Set hdmi output y port output scaler mode, y=0~4(0=all), z=1~3(1=bypass,2=4k->1080p,3=Auto)	s hdmi 1 scaler 1! s hdmi 0 scaler 1!	hdmi output 1 set to bypass mode hdmi all outputs set to bypass mode	hdmi all outputs set to bypass mode
r hdmi y scaler!	Get hdmi output y port output mode y=0~4(0=all)	r hdmi 1 scaler!	hdmi output 1 set to bypass mode	
s hdbt y scaler z!	Set hdbt output y port output scaler mode, y=0~4(0=all), z=1~3(1=bypass,2=4k->1080p,3=Auto)	s hdbt 1 scaler 1! s hdbt 0 scaler 1!	hdbt output 1 set to bypass mode hdbt all outputs set to bypass mode	hdbt all outputs set to bypass mode
r hdbt y scaler !	Get hdbt output y port output mode y=0~4(0=all)	r hdbt 1 scaler !	hdbt output 1 set to bypass mode	

Command Code	Function Description	Example	Feedback	Default
<b>EDID Setting</b>				
s edid in x from z!	Set input x EDID from default EDID z, x=0~4(0=all),z=1~31 1, 1080p,Stereo Audio 2.0 2, 1080p,Dolby/DTS 5.1 3, 1080p,HD Audio 7.1 4, 1080i,Stereo Audio 2.0 5, 1080i,Dolby/DTS 5.1 6, 1080i,HD Audio 7.1 7, 3D,Stereo Audio 2.0 8, 3D,Dolby/DTS 5.1 9, 3D,HD Audio 7.1 10, 4K2K30_444,Stereo Audio 2.0 11, 4K2K30_444,Dolby/DTS 5.1 12, 4K2K30_444,HD Audio 7.1 13, 4K2K60_420,Stereo Audio 2.0 14, 4K2K60_420,Dolby/DTS 5.1 15, 4K2K60_420,HD Audio 7.1 16, 4K2K60_444,Stereo Audio 2.0 17, 4K2K60_444,Dolby/DTS 5.1 18, 4K2K60_444,HD Audio 7.1 19, 4K2K60_444,Stereo Audio 2.0 HDR 20, 4K2K60_444,Dolby/DTS 5.1 HDR 21, 4K2K60_444,HD Audio 7.1 HDR 22, User define1 23, User define2 24~27, copy from hdmi output 1~4 28~31, copy from hdbt output 1~4	s edid in 1 from !! s edid in 0 from !!	input 1 EDID:1080p, Stereo Audio 2.0 all inputs EDID:1080p, Stereo Audio 2.0	1080p, Stereo Audio 2.0
r edid in x!	Get EDID status of the input x, x=0~4(0=all input)	r edid in 0!	input1 EDID: 4K2K60_ 444,Stereo Audio 2.0 input2 EDID: 4K2K60_ 444,Stereo Audio 2.0 input3 EDID: 4K2K60_ 444,Stereo Audio 2.0 input4 EDID: 4K2K60_ 444,Stereo Audio 2.0	



# RS-232 Control Command

Command Code	Function Description	Example	Feedback	Default
s cec hdbt out y on!	set hdbt output y power off by CEC, y=0-4(0=all hdbt output)	s cec hdbt out 1 off!	hdbt output 1 power off	
s cec hdmi out y mute!	set hdmi output y volume mute by CEC, y=0-4(0=all hdmi output)	s cec hdmi out 1 mute!	hdmi output 1 volume mute	
s cec hdmi out y off!	set hdmi output y power off by CEC, y=0-4(0=all hdmi output)	s cec hdmi out 1 off!	hdmi output 1 power off	
s cec hdbt out y off!	set hdbt output y power off by CEC, y=0-4(0=all hdbt output)	s cec hdbt out 1 off!	hdbt output 1 power off	
s cec hdbt out y mute!	set hdbt output y volume mute by CEC, y=0-4(0=all hdbt output)	s cec hdbt out 1 mute!	hdbt output 1 volume mute	
s cec hdmi out y vol-!	set hdmi output y volume down by CEC, y=0-4(0=all hdmi output)	s cec hdmi out 1 vol-!	hdmi output 1 volume down	
s cec hdbt out y vol-!	set hdbt output y volume down by CEC, y=0-4(0=all hdbt output)	s cec hdbt out 1 vol-!	hdbt output 1 volume down	
s cec hdmi out y vol+!	set hdmi output y volume up by CEC, y=0-4(0=all hdmi output)	s cec hdmi out 1 vol+!	hdmi output 1 volume up	
s cec hdbt out y vol+!	set hdbt output y volume up by CEC, y=0-4(0=all hdbt output)	s cec hdbt out 1 vol+!	hdbt output 1 volume up	
s cec hdmi out y active!	set hdmi output y active source by CEC, y=0-4(0=all hdmi output)	s cec hdmi out 1 active!	hdmi output 1 active source	
s cec hdbt out y active!	set hdbt output y active source by CEC, y=0-4(0=all hdbt output)	s cec hdbt out 1 active!	hdbt output 1 active source	


Command Code	Function Description	Example	Feedback	Default
<b>Network Setting</b>				
r ipconfig!	Get the Current IP Configuration	r ipconfig!	IP Mode: Static IP: 192.168.1.72 Subnet Mask: 255.255.255.0 Gateway: 192.168.1.1 TCP/IP port=8000 Telnet port=10 Mac address: 00:1C:91:03:80:01	
r mac addr!	Get network MAC address	r mac addr!	Mac address: 00:1C:91:03:80:01	
s ip mode z!	Set network IP mode to static IP or DHCP, z=0-1 (z=0 Static, z=1 DHCP)	s ip mode 0!	Set IP mode:Static (Please use "s net reboot!" command or repower device to apply new config!)	
r ip mode!	Get network IP mode	r ip mode!	IP Mode: Static	
s ip addr xxx.xxx.xxx.xxx!	Set network IP address	s ip addr 192.168.1.100!	Set IP address: 192.168.1.100 (Please use "s net reboot!" command or repower device to apply new config!) DHCP on, Device can't config static address, set DHCP off first.	
r ip addr!	Get network IP address	r ip addr!	IP:192.168.1.100	
s subnet xxx.xxx.xxx.xxx!	Set network subnet mask	s subnet 255.255.255.0!	Set subnet Mask address:255.255.255.0 (Please use "s net reboot!" command or repower device to apply new config!) DHCP on, Device can't config subnet mask, set DHCP off first.	

# RS-232 Command

Command Code	Function Description	Example	Feedback	Default
r subnet!	Get network subnet mask	r subnet!	Subnet Mask: 255.255.255.0	
s gateway xxx.xxx.xxx.xxx!	Set network gateway	s gateway 192.168.1.1!	Set gateway: 192.168.1.1 Please use "s net reboot!" com- mand or repower device to apply new config! DHCP on, Device can't config gate- way, set DHCP off first.	
r gateway!	Get network gateway	r gateway!	Gate- way:192.168.1.1	
s tcp/ip port x!	Set network TCP/IP port (x=1-65535)	s tcp/ip port 8000!	Set TCP/IP port:8000	
r tcp/ip port!	Get network TCP/IP port	r tcp/ip port!	TCP/IP port:8000	
s telnet port x!	Set network telnet port (x=1-65535)	s telnet port 23!	Set Telnet port:23	
r telnet port!	Get network telnet port	r telnet port!	Telnet port:23	
s net reboot!	Reboot network modules	s net reboot!	Network reboot... IP Mode: Static IP: 192.168.1.72 Subnet Mask: 255.255.255.0 Gateway: 192.168.1.1 TCP/IP port=8000 Telnet port=10 Mac address: 00:1C:91:03:80:01	
s uart x datalen y!	e data length of x hdbt uart, x=0-8, y=1-2, 1:8bit 2:7bit	s uart 1 datalen 1!	hdbt uart1 data len is 8bit	

Command Code	Function Description	Example	Feedback	Default
s uart x baudrate y!	Set the baudrate of x hdbt uart , x=0-4, y=1-8, 1: 115200(Default) 2: 57600 3: 56000 4:38400 5:19200 6:14400 7:9600 8:4800	s uart 1 baudrate 1!	hdbt uart1 baudrate is 115200	
s uart x parity y!	Set the Parity of x hdbt uart, x=0-4, y=1-3, 1:none 2:odd 3:even	s uart x parity 1!	hdbt uart1 parity is none	
s uart x type z senddata y end!	Send data y from x hdbt uart, z=0 ascii, z=1 hex ,x=0-4	s uart 1 type 0 senddata abcdefg end!	hdbt uart1 data: abcdefg	
r uart status x!	Get the Status of x hdbt uart , x=0-4	r uart status 1!	hdbt uart1 baudrate 9600, datalen 8bit, parity none	

# Application Example

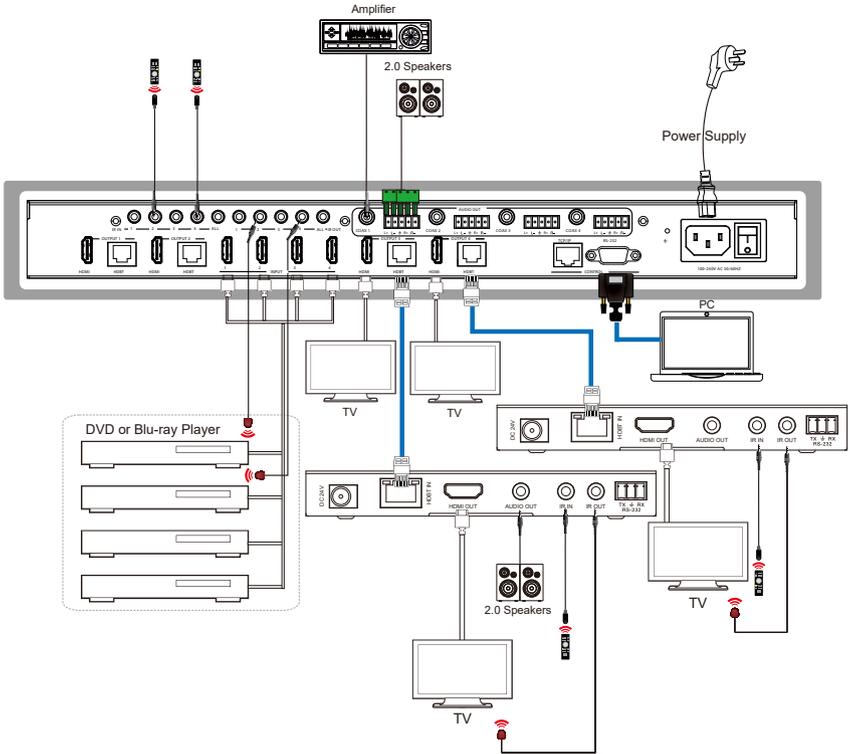

The terms HDMI and HDMI High-Definition Multimedia interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



**18Gbps 4 x 4 HDBaseT (150M) Matrix**  
**UHD44-EXB400R-K**

[www.orei.com](http://www.orei.com)

© 2023